

The Experts in Design-Build-Operate Solutions WWW.BUILDINGPOINTOHIOVALLEY.COM

BPOV Support Guide: Offsetting an Arc in Trimble Field Link

- 1. Click "Create"
- 2. Click, "Point Manager"



3. Choose Arc Offset



Pittsburgh Office 1120 Ohioview Avenue | Ambridge, PA 15003 | Ph: 724-266-1600 | Fax: 724-266-8161

Columbus Office 372 Morrison Road, Ste. D | Columbus, OH 43213 | Ph: 614-759-1000 | Fax: 614-759-7059



The Experts in Design-Build-Operate Solutions WWW.BUILDINGPOINTOHIOVALLEY.COM

4. Go to Input Menu



5. Input "Offset Interval," "Start Distance," "Radius"

		MEASURE		• • •	
Offset <mark>0.500 ft</mark>			Name	2 100	
Interval 0.500 ft			Description	.	
Start Distance 0.500 ft			Description		
Radius 2.000 ft			Layer	r 0	•
q w e r t	y (i	o p) (7) (8) (9) (ft)	K+
a s d f	gh	j	$\langle \rangle$	4 5 6 in	
		n m			
				/ 0 . mm	
		(1)	O/S: 0. Int: 0.5 SD: 0.5 Radius:	500 ft 500 ft 500 ft 2.000 ft	5

Pittsburgh Office 1120 Ohioview Avenue | Ambridge, PA 15003 | Ph: 724-266-1600 | Fax: 724-266-8161

Columbus Office 372 Morrison Road, Ste. D | Columbus, OH 43213 | Ph: 614-759-1000 | Fax: 614-759-7059



Ohio Valley

The Experts in Design-Build-Operate Solutions WWW.BUILDINGPOINTOHIOVALLEY.COM

6. Choose Two Points on Arc



7. Create



Pittsburgh Office 1120 Ohioview Avenue | Ambridge, PA 15003 | Ph: 724-266-1600 | Fax: 724-266-8161

Columbus Office 372 Morrison Road, Ste. D | Columbus, OH 43213 | Ph: 614-759-1000 | Fax: 614-759-7059